



manual temperature monitor YT353120



table of contents

| | |
|--|---------|
| safety instructions | page 3 |
| controls and indicating elements | page 4 |
| description of the operating elements | page 5 |
| menu / overview | page 6 |
| operation modes of the switching outputs | page 8 |
| switching point with switch-off point | page 9 |
| switching point with hysteresis | page 9 |
| window function with switching point | page 10 |
| window function with hysteresis | page 10 |
| operating modes | page 11 |
| programming | page 12 |
| list of parameters | page 12 |
| mounting and electrical connection | page 15 |
| connection of the PT100 sensors | page 16 |
| initial operation / operation | page 17 |
| factory settings / technical data | page 18 |
| dimensional drawings / list of articles | page 19 |

safety instructions


Read the product description before installing the unit. Ensure that the product is suitable for your application without any restrictions.

Non-adherence to the operating instructions or technical data can lead to personal injury and/or damage to property.

In all applications check compliance of the product materials.

Never use these devices in applications where the safety of a person depends on their functionality.

controls and indicating elements

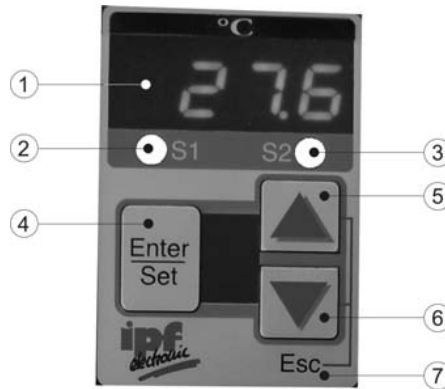

| | description | function | symbol |
|---|-------------------------------|---|--------|
| 1 | 4-digit display | displays the current system temperature parameter, parameter values | |
| 2 | LED red S1 | displays the switching state of output 1 lights, if the output is switched | - |
| 3 | LED red S2 | displays the switching state of output 2 lights, if the output is switched | - |
| 4 | programming button Enter/ Set | selection of menu and parameters setting and saving of parameters | |
| 5 | arrow key up | setting the parameter values increasing the value (fast, keep the button pressed) | |
| 6 | arrow key down | setting the parameter values decreasing the value (fast, keep the button pressed) | |
| 7 | ESC | finishing programming without saving keyboard lock: press both the arrow keys at the <u>same time</u> | |

description of the operational controls

display

4-digit LED display

symbolic description:



shows the current system temperature (RUN-Mode), menu name, parameters and parameter values.



blinking display in RUN-Mode: fault report (Error)
 3 x blinking in PROGRAMM mode: saving current value after pressing
 Enter/Set button



The indication on the display depends on the programmed functions. If one of these functions is selected in the enhanced Menu, the indication will be shown on the display.

program button Enter/Set

symbol:



Selection of menus and submenus as well as confirming and saving of parameter values.
Short pressing in the RUN-Mode → starting up the main menu.

arrow keys

symbol:



Increasing and decreasing the parameter values and scrolling of the menu.
 Pressing the button continuous, the value increases or decreases in „fast-forward“ mode.
 Pushing the button → the value changes step by step.

ESC- button

symbol:





Pressing both arrow keys  +  **at the same time** results in the **ESC** function.

With the ESC function you can step backwards inside the menu and parameters without saving the settings.



In order to leave all menus and submenus please press the **ESC**-button again and again until you are back in the RUN-mode.

keyboard lock


If the device is in the RUN-Mode and you press the arrow keys  +  at the same time for at least 5 seconds, the keyboard lock will be activated.

The display shows „sLOC“, blinking 3 times.

Now the adjusted settings can be read but not be changed.

For cancelling the Keyboard Lock please press both arrow keys  +  for at least 5 seconds again.

menu / overview

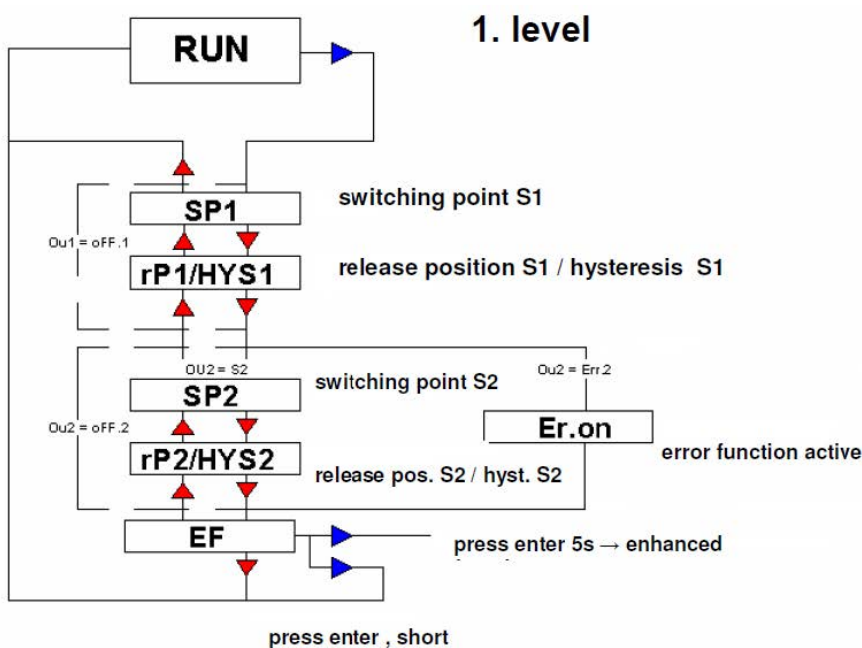

operation modes of the switching outputs

notes:

- The following examples and descriptions of the switching output 1 (SP-1) refer to the switching function „normally open“ (no). If the switching output 1 is set „normally closed“ (nc) the states are reversed.
- The minimum range between the switching outputs (SP.1 and rSP.1) is 1% of the temperature range; stated by the system.
- The smallest adjustable hysteresis is 1% of the temperature range; stated by the system.
- All examples are effective for output 2, if this output is defined as switching output (SP-2) also.

operating modes

RUN-Mode

Normal operating mode

At power on the unit is in the RUN-mode. It carries out its measurement and evaluation functions and provides output signals according to the set parameters.

The display shows the current system temperature. The red LEDs indicate the switching state of the outputs.

display mode

Display and adjustment of the switch-points, release positions and of the hysteresis. When the *Enter/Set* button is pressed briefly, the main menu opens. The internal sensing, processing and output functions of the unit continue as if in RUN-mode. The parameter values can be read and adjusted.

Pressing the arrow key „downwards“ briefly, scrolls through the adjustable parameters.

Pressing the *Enter/Set* button briefly, shows the adjusted parameter value.

Pressing the arrow key „downwards“ or „upwards“ briefly, changes the parameter value step by step. Pressing the arrow key continuous changes the value fast.

Pressing the *Enter/Set* button safes the adjusted value, the display blinks three times.

The unit now operates with the „new adjusted“ value.

Returning to the RUN-Mode: Press the *ESC* button.

Enhanced menu / programming mode

Setting of the parameter values and programming the main functions.

The unit changes to the programming mode if „EF“ is set in the main menu and the *Enter/Set* button is pressed for at least 5sec.

The internal sensing, processing and output functions of the unit continue as if in RUN-mode.

Pressing the arrow key „downwards“briefly, scrolls through the adjustable parameters.






Pressing the *Enter/Set* button briefly, indicates the adjusted parameter value

Pressing the arrow key „downwards“ or „upwards“ briefly, changes the parameter value step by step. Pressing the arrow key continuous changes the value fast.

Pressing the *Enter/Set* button safes the adjusted value, the Display blinks three times.

The unit now operates with the „new adjusted“ value.



Returning to the RUN-Mode: Press the *ESC* button several times.

| programming | | |
|--|-------------------|--|
| button | display | description |
|  1X | SP1 | Press the Enter/Set button briefly to get into the main menu. Press the Enter/Set button again. The current value for switching point S1 will be displayed.* Set the parameter value with the arrow keys. Confirm the setted value with the Enter/Set button. |
|  1X | rP1 / HYS1 | Press the Enter/Set button. The current value for the release point S1 respectively the hysteresis will be displayed.* Set the requested value with the arrow keys. Confirm the value with the Enter/Set button. |
|  1X | | Output 2 is set as analog output: A.On Output 2 is set as switching output SP2 / rP2 respectively HYS2 . Changes can be made as described above. Output 2 gives an error signal: Er.On As soon as the Outputs become inactive, EF will be displayed. |
|  1X | EF | Press Enter/Set or  briefly to get into the RUN Mode. Press the Enter/Set button continuously for min. 5sec to get into the enhanced functions. A point is blinking in the display as long as the button is pressed. Changes inside the menu items can be made as described above. The possible menu items can be seen in the parameter list. |

*a flashing point on the display indicates that a value can be changed. After confirming the set value the displayed value will blink three times.

| parameter list | |
|-------------------|--|
| SP1 | switching point S1 |
| HYS1 / rP1 | hysteresis S1 / release position S1 |
| SP2 | switching point S2 |
| HYS2 / rP2 | hysteresis S2 / release position S2 |
| EF | This menu item encloses a sub menu which contains further parameters. Press the Enter/Set for at least 5sec to get access to these parameters. |
| rES | Reset (getting back to the factory settings) Press the Enter/Set button at least for 5sec to reset the system. Thereafter the unit returns into the RUN Mode automatically. |

| | |
|---------------------|--|
| <p>PtCo</p> | <p>configuration for PT100 sensors: 2-4.L connection of 2- or 4-wire sensors 3.L connection of 3-wire sensors This configuration is only programmable directly at the YT35.</p> |
| <p>Ou 1</p> | <p>Configuration of output1: Four switching functions are possible: SP.HY switch-point / hysteresis SP.rP switch-point / release position FE.HY window function / hysteresis FE. rP window function / release position oFF.1 output 1 „off“</p> |
| <p>noc 1</p> | <p><i>noc 1 is active if in Ou 1 a switching function is set.</i> Switching function of switching output S1: no.1 (normally open) nc.1 (normally closed)</p> |
| <p>ds 1</p> | <p><i>ds 1 is active if in Ou 1 a switching function is set.</i> on-delay timer function S1</p> |
| <p>dr 1</p> | <p><i>dr 1 is active if in Ou 1 a switching function is set.</i> off-delay timer function S1</p> |
| <p>Ou 2</p> | <p>Configuration Output 2: 4 switching functions, the error signal or 4 analog functions: SP.HY switch-point / hysteresis SP.rP switch-point / release position FE.HY window function / hysteresis FE. rP window function / release position Err. 2 error signal oFF.2 output 2 „off“</p> |
| <p>noc 2</p> | <p><i>noc 2 is active if in Ou 2 a switching function is set.</i> Switching function of switching output S2: no.2 (normally open) nc.2 (normally closed)</p> |
| <p>dS 2</p> | <p><i>ds 2 is active if in Ou 2 a switching function is set.</i> Turn-on delay timer function S2</p> |
| <p>dr 2</p> | <p><i>ds 2 is active if in Ou 2 a switching function is set.</i> Turn-off delay timer function S2</p> |

| | |
|---------------------------|---|
| <p><u>Ou A</u></p> | <p>Configuration analog output: <u>4-20</u> Analog signal 4-20mA <u>0-20</u> Analog signal 0-20mA <u>20-4</u> Analog signal 20-4mA <u>20-0</u> Analog signal 20-4mA <u>0u10</u> Analog signal 0-10V <u>0u5</u> Analog signal 0-5V <u>10u0</u> Analog signal 10-0V <u>5u0</u> Analog signal 5-0V <u>oFF A</u> Analog output off</p> |
| <p><u>ASP</u></p> | <p>ASP is active if in <u>Ou 2</u> an analogue signal was set. <u>Analogue starting point:</u> The pressure value (low pressure) where the analog output starts.</p> |
| <p><u>AEP</u></p> | <p>AEP is active if in <u>Ou 2</u> an analog signal was set. <u>Analog end point:</u> The pressure value (higher pressure), where the analog signal ends. Note: The minimum range between starting point and end point is 20% of the measuring range</p> |
| <p><u>dAA</u></p> | <p>dAA is active if in <u>Ou 2</u> an analogue signal was set. <u>Damping the analogue output</u> This function filters peak values of short duration or high frequency. dAA-value = response time. Period of time between the changing of the pressure and the analogue signal (unit: seconds).</p> |
| <p><u>FOUA</u></p> | <p>FOUA is active if in <u>OU 2</u> an analog signal was set. <u>Error signal of the analog output.</u> The analog output signal is <3.6mA or >22mA at 4-20/ 20-4 only)</p> |
| <p><u>EdA</u></p> | <p>Error display of the analog output. (at 4-20mA/ 20-4mA only)</p> |
| <p><u>HI</u></p> | <p>saving the max. pressure value of the system. The highest value is displayed.  = delete memory</p> |
| <p><u>LO</u></p> | <p>Saving the min. pressure value of the system. The lowest value is displayed.  = delete memory</p> |
| <p><u>CYC</u></p> | <p>Counter switching cycles of S1</p> |
| <p><u>COF</u></p> | <p>Zero-point calibration The internal measured value (working value off he sensor) is offset compared tot he real measured value. Adjustment range: +/-10% of the measuring range</p> |

| | |
|-------------|---|
| ddIS | Damping display (Peak-Hold-time) |
| FdIS | Function display: <u>rd</u> rotate display <u>Ph</u> Peak-Hold. Short-term display of temperature peaks <u>Rd. Ph</u> rotate display + Peak Hold <u>oFF</u> standard display |
| tEst | Press Enter/Set button for 5sec <input type="checkbox"/> test-function (no Timeout) With the Test-function you can check the adjusted parameters without influence for the system. The display starts with indicating the current temperature. Due to the arrow keys the displayed value can be increased or decreased. All parameters react as if the real temperature would increase or decrease. Leave the Test Mode with ESC. The display range of the test mode is -40 ... +300°C |
| END | End of enhanced functions. Press the Enter/Set button twice to get into the RUN-mode again. |

The units come with an optical interface that allows all parameters to be set and adjusted by a PC or notebook.

The suitable interface cable and Windows-Software can be ordered with the article number **AD000011**.

With the Software you are able to adjust all functions described above.

mounting and electrical connection

For wall mounting you can order a mounting clip with the article-no. **AY000060**.

After mounting the sensor mechanically, the control panel can be rotated by 350° to align it for the machine operator.

The unit must be connected by a suitably qualified electrician. The national and international regulations for the installation of electrical equipment must be observed. Voltage supply to EN50178.

The device shall be supplied from an isolating source and protected by an overcurrent device. Disconnect power before connecting the unit as follows:


| | | |
|----------------------|---------------|-----|
| +U _B : | <u>brown</u> | (2) |
| GND: | <u>blue</u> | (7) |
| analog output: | <u>green</u> | (3) |
| switching output S1: | <u>yellow</u> | (4) |
| switching output S2: | <u>gray</u> | (5) |
| N.C.: | <u>white</u> | (1) |
| N.C.: | <u>pink</u> | (6) |
| N.C.: | <u>red</u> | (8) |

NOTE: Use a shielded cable socket (e.g. **VK205A21**), in order to avoid interferences.

connection of the PT100 sensors

The connection of a resistance thermometer takes place via a M12-socket on the device side. 4-wire system PT100 sensors with integrated M12-connector can be connected directly or with a connection cable (e.g. **VK030F25**) with the temperature monitor.

For PT100 sensors with a fixed cable use a M12-connector (e.g. **VK003028**). Depending on the version the connection pins must be bridged, as you see below:

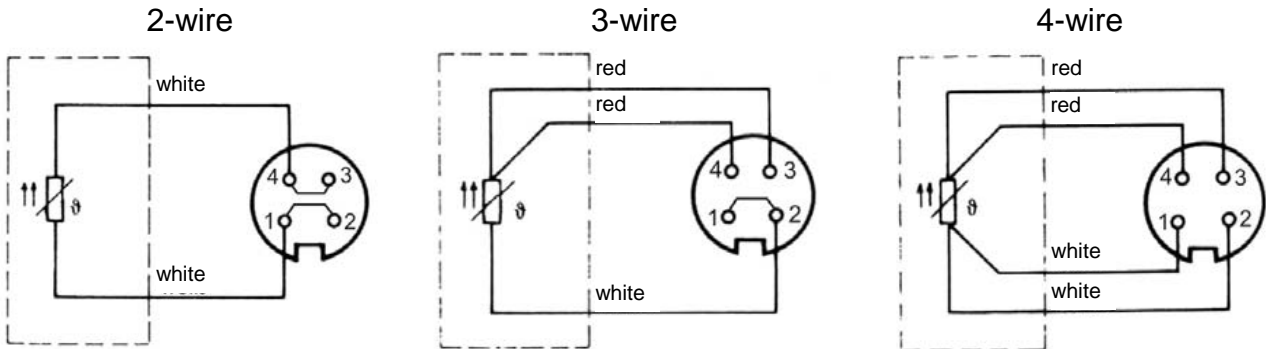

start-up / operation

After mounting, electrical connection and programming, please check the safety of the unit.

Fault indications during operation

| display | cause | effect on the outputs | elimination |
|------------|--|--|--|
| OL | overload exceeding the measuring range > 368°C | | -limit the system temperature |
| UL | underload measuring range undercut | | |
| SC1 | short-circuit S1 | analog output= error signal* | - check wiring - check load of S1 |
| SC2 | short-circuit S2 | analog output= error signal* | - check wiring - check load of S2. |
| SC | short-circuit S1 and S2 | analog output= error signal | - check wiring - check load |
| ERR | sensor defect, internal error | -S1 and S2 are switched off - analog output = error signal* | contact manufacturer |
| AO | If current output is selected: analog output open If voltage output is selected: short-circuit or voltage applied | | - check wiring - check burden resistance. NOTE: If this indication is undesired, the menu item EdA can be set Ed.of. |


* the error signal of the analog output appears only, if in Ou2 an analog signal (4 ... 20mA or 20 ... 4mA) was set.
The error signal (< 3.6mA or >22mA) can be set in menu item FOuA.

| factory settings | |
|------------------|---------|
| OU 1 | SP.rP |
| OU 2 | 4 - 20 |
| SP 1 | 130°C |
| rP 1 | -17.3°C |
| SP 2 | 215°C |
| rP 2 | -17.3°C |

technical data

| | |
|-------------------------------|---|
| temperature range [°C] | see list of articles |
| temperature detection | resistance thermometer PT100 (2-, 3-, or 4-wire) |
| operating voltage | 12 to 32V DC, reverse polarity protection (15 ... 32V DC - voltage output) |
| voltage drop | < 2V |
| current consumption | < 60mA |
| switching outputs | 2 x pnp-switching, no/nc 1A short-circuit protection |
| time delay | 0 to 20sec, turn-on and turn-off delay separately adjustable |
| switch-point adjustment range | 1 to 100% of the accumulated value |
| release position | 0 to 99% of the accumulated value |
| switching frequency | max. 125Hz |
| repeatability | < ±0.1% of accumulated value |
| current output | 0/4 to 20mA, 20 ... 0/4mA, adjustable start and end point |
| burden | max. $RL [W] = (U_b - 8V) / 20mA$ |
| error recognition | analog output in case of line break (current) or short-circuit (voltage, from 1V) |
| rise time | 5msec (10% ... 90% of PN) |
| damping | 0 to 20sec, adjustable |
| linearity deviation | max. ±0.25% of PN |
| system temperature display | 4 x 7 segment LED-Display |
| switching function display | 2x LED red |
| operating temperature | -20°C to +80°C |
| connection of the PT100 | M12-cable socket, 4-pin, with rotatable coupler |
| housing material | PA6.6, polyester |
| system of protection | IP65 acc. to EN 60529 |
| electrical connection | M12 connector 4-pin |
| optical interface | 9600 Baud, via optical adapter at USB-Port |
| voltage output | 0 ... 5/10V, 5/10 ... 0V, adjustable start and end point |
| burden | min. 5kΩ |

dimensional drawings

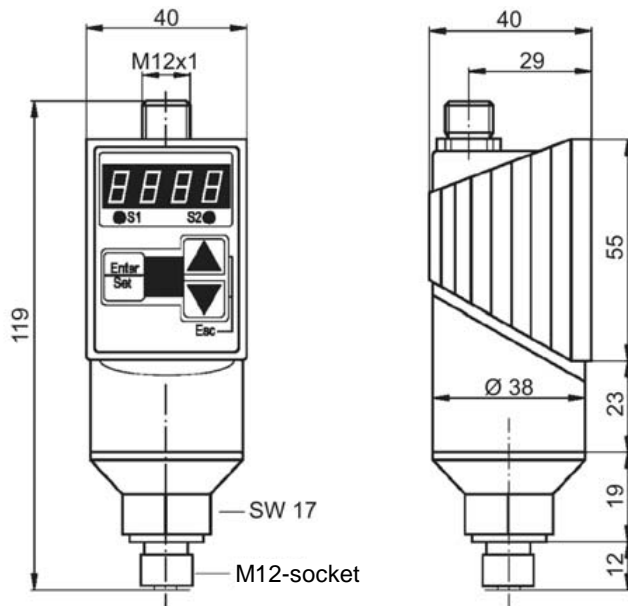

list of articles

| article-no. | design | note | housing | voltage | output | current | connection |
|-------------|--------|---------------|---------------------------|-------------------|--------------------------|---------|-----------------|
| YT353120 | 35 | -40 to +300°C | polyester / n-pltd. brass | 12 ... 32V DC | pnp, no/nc, | 2x1A | M12-con., 4-pin |
| AD000060 | | accessory | | optical interface | connection USB, software | | |
| AD000011 | | accessory | | mounting clip | | | 1.5m cable |

Revised version 01.02.2010 (internal software 4.13, cycle counter for SP1)

Revised version 10.02.2016 (analog output 0-10V)